


P1 - TEST

(Protect-1 Concentration Test Kit)

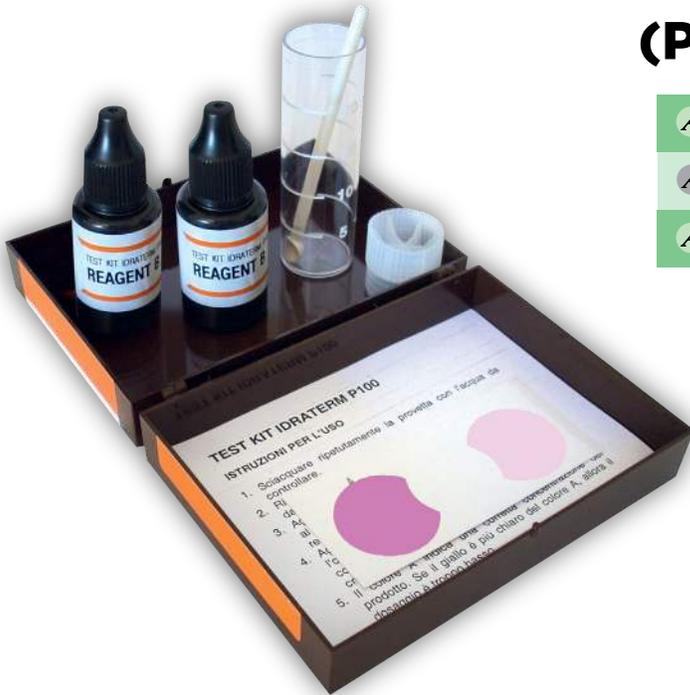

- A Axi-Therm Protect-1 concentration test kit
- A Colour-coded drop test for accurate Protect-1 dosing
- A A single P1-Test can be used multiple times

DIRECTIONS:

1. Rinse test tube well with water to be analyzed.
2. Fill the test tube with the water to be analyzed up to the 5 ml mark.
3. Holding the bottle vertically add 3 drops of Reagent A and stir well.
4. Holding the bottle vertically add 3 drops of Reagent B and stir well.
5. Match the developed yellow with the color comparison chart.
 - Color A is equivalent to a correct product concentration.
 - If the pink color is lighter than color A the product dosage is too low.